



## Features

- Precipitation Sensor for automatic weather stations and stand alone application
- Exchangeable, weighing tipping bucket system according to Joss-Tognini
- 2 cm<sup>3</sup> (~ 2g water) tipping bucket for precise precipitation measuring in regions with normal rain falls
- 4 cm<sup>3</sup> (~ 4g water) tipping bucket for precise precipitation measuring in regions with heavy rain falls/ tropical rain
- Connectable to external data logger
- Winter-fit model (15189 H) with controlled 2-circuit heating
- High life expectancy by use of weatherproof materials (anodized aluminium, stainless steel)
- Funnel according to the WMO Standard No. 8

## Function

The weighing **precipitation sensor (15189)** measures the rain quantity by a tipping bucket developed by Joss-Tognini, the bearings of which have been arranged for low friction. Errors that normally occur due to incomplete draining because of surface tension are automatically compensated by the specific form of the tipping bucket.

The tipping bucket can hold 2 cm<sup>3</sup> (2 g) resp. 4 cm<sup>3</sup> (4 g) of water. The collecting surface of 200 cm<sup>2</sup> (WMO standard) means that one bucket charge is equivalent to a precipitation rate of 0.1 mm resp. 0.2 mm. If the bucket is tipped, a change over reed switch that is integrated in the sensor and functions in all positions will be closed or opened (depending on the electrical connection). This pulse output can be electrically scanned, remotely transmitted and recorded.

The **precipitation sensor (15189)** is mounted on a pedestal that is equipped with a connection piece and are attached to a tube with an outside diameter of 60 mm.

For application in snowfall regions the heater equipped model **(15189 H)** ensures all-year-round measurement. Two separate pulsed solid-state thermostats with lowest hysteresis are providing an optimal temperature at which snowing up of the sensor will normally be prevented and evaporation from the heated surfaces will be minimized.

The **precipitation sensor (15189)** is made of weather-resistant aluminium and stainless steel. This assures a long durability.

These high-tech precipitation sensors comply with the regulations WMO.

## Installation

### Mounting of the sensor

The **precipitation sensor (15189)** must be mounted on a tube or pole with an outside diameter of 60 mm. A metallic extension tube with a minimum length of 100 mm is recommended, if a wooden pole is used.

For easy adjustment place a spirit-level on the upper measuring edge.

**Attention!** Do not damage the measuring edge !

Place the **precipitation sensor (15189)** on the end of the pole until it fits in. By using the special key (4 mm) provided, tighten the screws in the mounting pedestal evenly. Adjust the upper measurement edge to an exact horizontal position. By doing this, the tipping bucket will automatically be positioned vertically inside the device and will work symmetrically.

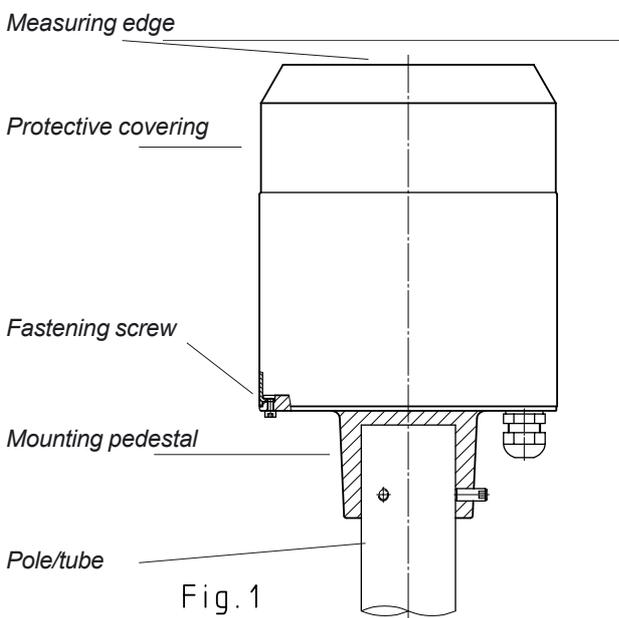


Fig. 1

### Dismounting of the protective covering

Loosening the screw (fig. 1) with the provided 3 mm hexagon key until the protective covering can be turned right to the stop position and take off upward then.

### Assembly of the Tipping bucket



To avoid damage to the tipping bucket during transport, it is separately packed and should be inserted in the precipitation sensor (15189) on site only after mounting the gauge on the steel tube.

For the assembly first you must remove the protective covering.



**Attention!** Do not damage the sharp edges of the gauge and do not bend the middle dividing plate!

When fitting the tipping bucket, proceed with utmost caution so that the sharp edges of the tipping bucket are not damaged and the middle wall is not bent!

During operation the tipping bucket lies on the precision bucket bearings. To reduce the friction, which is produced at one tipping, the bearings are made of abrasion-resistant delrin.

The mounted tipping bucket is secured against eventual changes of position by means of two plates.

To insert the tipping bucket, first the relocatable locking plate (Fig. 2) must be pushed back.

Now insert the tipping bucket. Make sure that the magnet attached to the middle wall of the tipping bucket rests under the capsule with the embedded reed contact.

Finally the tipping bucket must be secured by pushing back the relocatable locking plate.

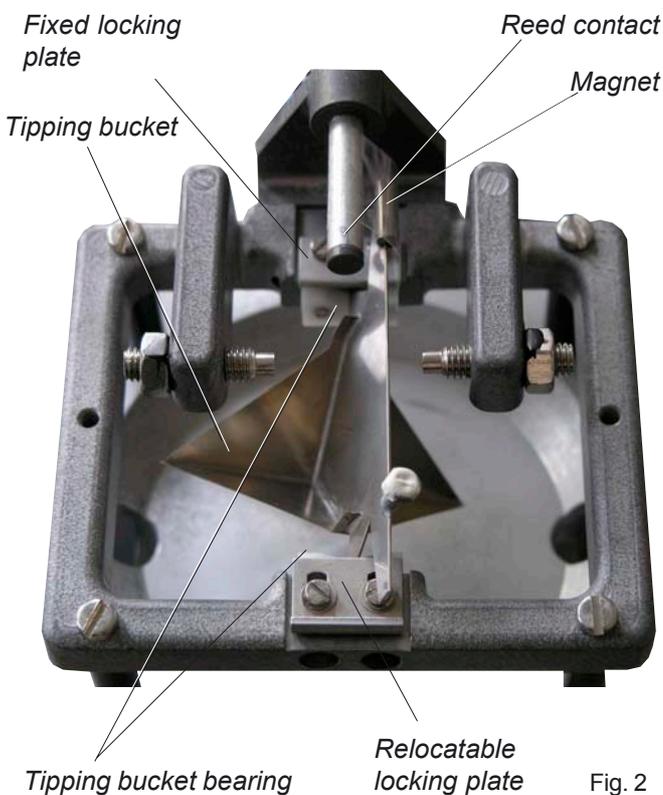


Fig. 2



**Attention!** In order to protect the tipping bucket the dirt spiral must be inserted in the collecting funnel (fig. 3)


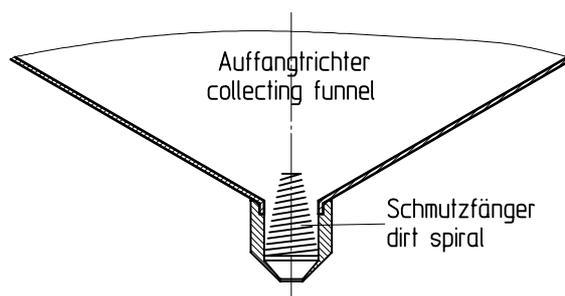



Fig. 3

**Electrical Wiring**

Precipitation sensors (15189 H) / (15189 H W4)

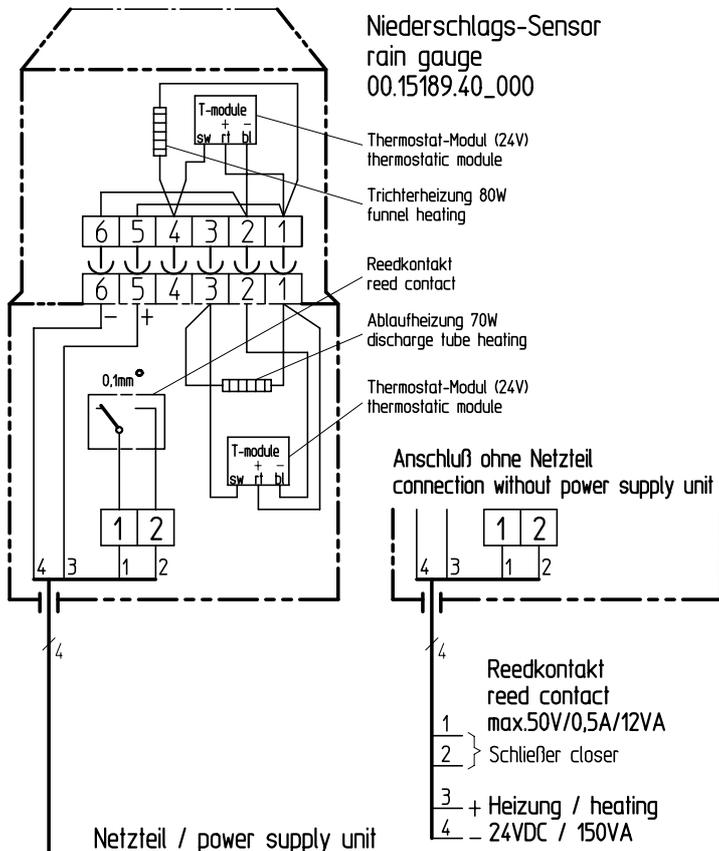


Netzteil / power supply unit  
 00.14966.200000

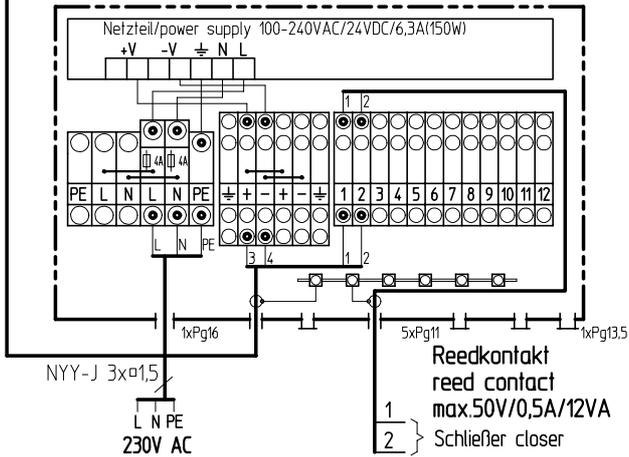


**Electrical Wiring**

Precipitation sensors (15189) / (15189 W4)

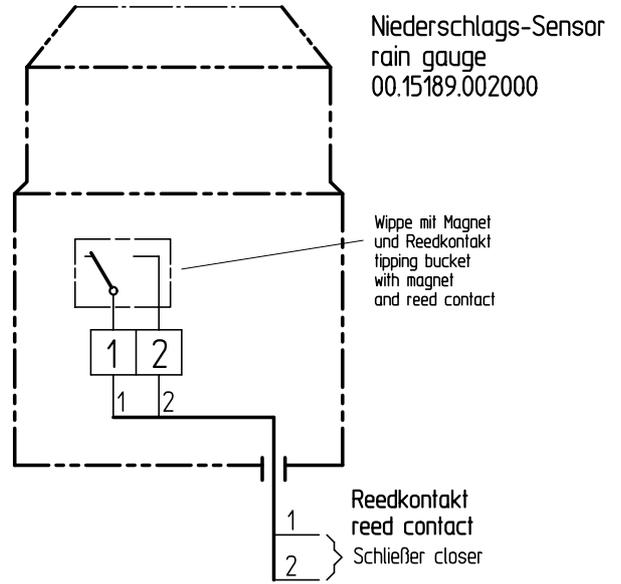

**Dimensional Drawing**

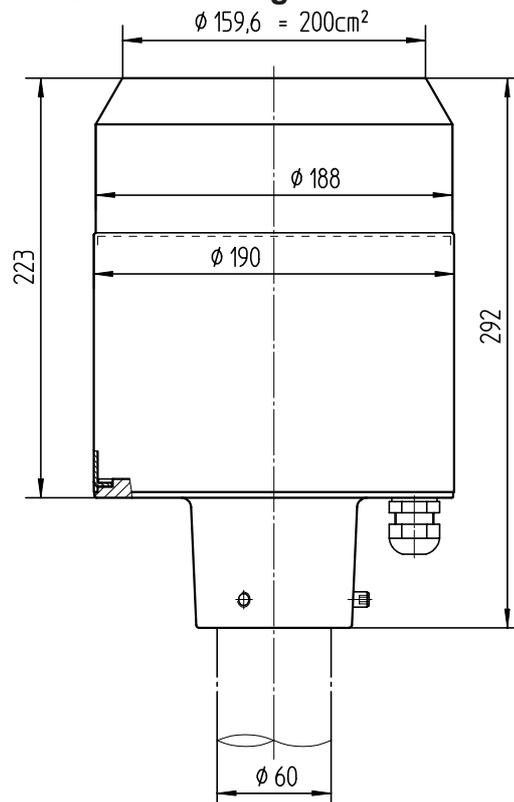

## Electrical connections

Type of cable: LIYCY 2 (4) x 0.75 mm<sup>2</sup>;  
 diameter approx. 5.8 mm  
 And / or: 2 (4) x AWG20CULsw;  
 diameter approx. 5.1 mm

The sensor will be connected to the cable by leading the cable through the conduit gland to the connector inside the sensor housing.

The cable should be not longer than 11 m.



When the cable is transferred inside the soil it is recommended to protect the cable with a protecting plastic tube.

## Initial operation

If the sensor system has been completely mounted and electrically assembled, the transducer will be ready for operation. Only the operational check has to be performed.

## Maintenance and operational check

The precipitation sensor is nearly maintenance-free. The sensor should be checked and cleaned periodically in order to guarantee its proper operation, since dirt accumulation may cause errors of measurement. The time interval of cleaning depends on the local conditions.

The operational check of the sensor may be performed by the use of artificial precipitation. The contents of a 200 cm<sup>3</sup> resp. 400 cm<sup>3</sup> (by 4 cm<sup>3</sup> buckets ) test container of water must be conducted into the collecting funnel through a nozzle in such a way that the drops fall into the funnel beside the outlet. The nozzle should be adjusted to allow a complete water run out in 10 to 20 minutes (approx. diameter 0.6 mm).

Because of the high intensity of this artificial precipitation the amount of tipping buckets will have a set value depending on the flow time of the test liquid. This set value can be taken from the following diagram:

Set value for the amount of tipping bucket:



Rinse the sensor thoroughly for cleaning. Clinging particles of dirt in the collecting funnel or outlet pipe may be removed with a piece of wood.

If unsatisfying measurement results occur after this cleaning procedure, the tipping bucket should be disassembled for cleaning. Absolute care must be taken not to damage the tipping bucket!

The dismounted tipping bucket can be cleaned by placing it in warm water with some scouring material and by carefully scraping off unwanted dirt using a small piece of wood.


The **function of the heating elements** can be tested also at ambient temperatures above the control temperature of the solid-state thermostat. For this simple test a regular magnet has to be held close to the blue housing of the switching circuit. When reaching a surface temperature of approximately 50 °C the current will be switched off.

Both blue thermostat modules are fitted internally on the funnel surface as well on the bottom of the housing.

The operational conditions will be indicated with coloured light-emitting diodes (LED) an the thermostatic module:

**green:** supply voltage

**red:** heating on

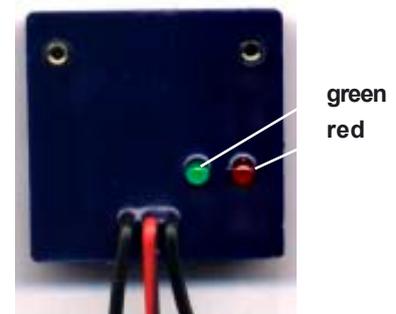

## (15189) with heating

Version like (15189) standard, but with solid-state-thermostat controlled heating for collecting funnel and drain pipe.

### Electrical connections

Same as (15189) but additionally connection clips for the heating. See the internal circuit (15189 H).

## Technical data

**(15189) Variety with 2 cm<sup>3</sup> bucket, unheated**  
**Id-No. 00.15189.002 000**

Measuring principle	Weighing tipping bucket designed acc. to Joss-Tognini
Measuring range	2 cm <sup>3</sup> (~2 g) - volume of bucket 0...8 mm/ min
Resolution	0.1 mm
Accuracy	± 2% with intensity correction
Range of application	0...+70°C - measuring (frost-resistant up to -20°C)
Pulse output	Reed contact max. load 24 V <sub>DC</sub> / 0.2 A / 3 W Pulse length typical 60...85 ms
Dimensions	See dimensioned drawing, page 4
Suitable for mounting	Ø 60 mm
Weight	Approx. 4 kg
Standards	WMO-No. 8 • VDI 3786 Bl. 7 EN 50081/82 • VDE 0100

**(15189 W4) Variety with 4 cm<sup>3</sup> bucket, unheated**  
Data like (15189), but for very high precipitation intensity

**Id-No. 00.15189.004 000**

Measuring range	4 cm <sup>3</sup> (~4 g) - volume of bucket 0...16 mm/ min
Resolution	0.2 mm

**(15189 H) Variety with 2 cm<sup>3</sup> bucket, heated**

Data like (15189) 00.15189.002 000, but in additional with controlled 2-circuit-heating:

**Id-No. 00.15189.402 000**

Heating data	Electronic controlled, dual-circuit
Accuracy	4°C ± 2°C, controlled temperature within a range of -20...+4°C
Heating power	80 VA (funnel) 70 VA (outlet/ tipping bucket)
Supply voltage	24 V <sub>DC</sub> / 150 W
Range of application	-20...+70°C (no icing, no snowdrift)

**(15189 H W4) Variety with 4 cm<sup>3</sup> bucket, heated**

Date like (15189 W4) 00.15189.004 000, but in additional with controlled 2-circuit-heating, like (15189 H)

**Id-No. 00.15189.404 000**

## Accessories

(1518 S4)	Stainless steel mast Id-No. 00.15180.400 000
(1518 S8)	Stainless steel concrete foundation mast Id-No. 00.15180.800 000
(1518 U21a)	Protection ring Id-No. 32.15180.021 010
(1518-49)	Dirt pan (spare part) Id-No. 33.15180.049 000

### For varieties with heating (H-varieties)

(1496 S62)	Power supply unit Id-No. 00.14966.200 000
(15188 U60b)	Connecting cable 0.6 m for power supply/ sensor Id-No. 32.15188.060 020
(1518 S4...)	Stainless steel mast Id-No. 00.15180.4xx xxx
(1518 S8...)	Stainless steel concrete foundation mast Id-No. 00.15180.8xx xxx

## Safety instructions

This system is designed according to the state-of-the-art accepted safety regulations. However, please note the following rules:

1. Before setting into operation, please read all appropriate manuals!
2. Please take notice of internal and state-specific guidelines and/or rules for the prevention of accidents (e.g. the professional association). If necessary ask your responsible safety representative.
3. Use the system according to the manual's regulations only.
4. Always leave the manual at hand at the place of work of the system.
5. Use the system in technically correct conditions only! You have to eliminate influences immediately, which impair the security .
6. Please note the loss of warranty and non-liability by unauthorized manipulation of the system. You need a written permission of the Wilh. LAMBRECHT GmbH for changes of system components. These activities must be operated by a qualified technician.
7. Prevent the ingress of liquids into the devices without permission.



Quality System certified by DQS according to  
DIN EN ISO 9001:2000 Reg. No. 003748 QM

Specifications subject to change without notice.

15189+H\_b-de.pmd 45.05

**Wilh. LAMBRECHT GmbH**  
**Friedländer Weg 65-67**  
**37085 Göttingen**  
**Germany**

Tel +49-(0)551-4958-0  
Fax +49-(0)551-4958-312  
E-Mail [info@lambrecht.net](mailto:info@lambrecht.net)  
Internet [www.lambrecht.net](http://www.lambrecht.net)