

Features:

- Easy reading of the outside temperature from the inside
- Maximum and minimum values with auto reset
- Easy to fix, demountable for window cleaning
- Also for indoor use
- Weather resistant

Specification:

Measuring range	outdoor: -25°C to +70°C
	indoor: 0°C to +40°C
Precision:	outdoor: ±1.5°C
	indoor: ±1°C
Resolution:	0.1°C
Battery:	LR44 1.5 V

Installation:

Window thermometer use: Fix the holder with the enclosed adhesive outside at the window. Please clean the window glass before (without detergent).

Indoor thermometer use: Fix the holder with the enclosed adhesive at your desired location.

Now you can hang up and demount the thermometer very easily.

Attention:

- Avoid direct sunshine: It falsifies the indicated values! Extremely high temperatures may lead to damages of the display. Permanent sunshine may bleach the liquid crystals.
- Choose a preferably dry position for the transmitter. Continuous humidity strains the electronic components needlessly.
- Important note for the use as a window thermometer: Due to the heat emission (depending on isolation) and the protected location of your window it is possible that the temperature displayed on your VISTA is higher than the outdoor temperature at a free unsheltered location directly over the ground.

Use:

- Remove the holder. Pull off the transparent cover from the display. Take the LCD carefully out of the casing by holding the left and right side of the module. **Attention: Do not touch the display directly.** Remove the battery safety strip or insert the battery (+-side facing up). Pull off the protection foil of the display. The unit is now ready to use.
- The upper display shows the current temperature, the lower display the maximum (MAX) and minimum (MIN) temperatures.
- There is an automatic update of maximum temperature at 8:00 and minimum temperature at 20:00. Therefore the current time must be set.
- Press the MODE button to enter setting mode. Set the hours by pressing the „+“ button. Hold and press the button for a fast count. Press the MODE button again to set minutes in the same way. To go back to normal mode press the MODE button once more .
- Choose by the IN/OUT switch the operation as a window thermometer (OUT) or indoor thermometer (IN).
- When all settings are made put the LCD carefully back in the casing and replace the transparent cover.

Battery change:

- Put a screw driver in the rectangular opening and push out the battery carefully. Change the battery (+-side facing up). Please pay attention to insert the battery completely and not to damage the circuit board.
- **Attention:** Please do not dispose of old electronic devices and empty batteries in household waste. To protect the environment, take them to your retail store or to appropriate collection sites according to national or local regulations.

Maintenance:

- Do not pull or bend the display and the sensor.
- Replace the battery when the display becomes weak.
- Do not expose the instrument to extreme temperatures, vibration or shock.
- Clean it with a soft damp cloth. Do not use solvents or scouring agents.
- Please do not try to repair the unit. Contact the original point of purchase. Please change the battery before complaining. No guarantee if the instrument is handled or opened improperly.