


dropsight

LeafLab

ASSEMBLY INSTRUCTIONS

dropsight
spray deposition tracer


STEP ①

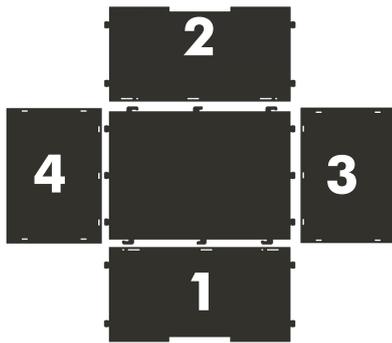

1. Remove contents from the packaging
2. Arrange panels around the base


** Always ensure that the smooth sides of the panels are facing inwards.*

STEP ②

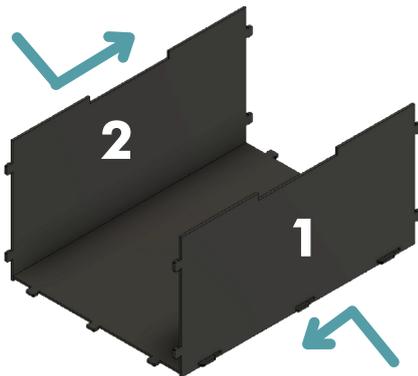

1. Assemble the side panels with an 'in-and-slide' motion as per the illustration.
2. Ensure that the panels "click" into place.

STEP ③

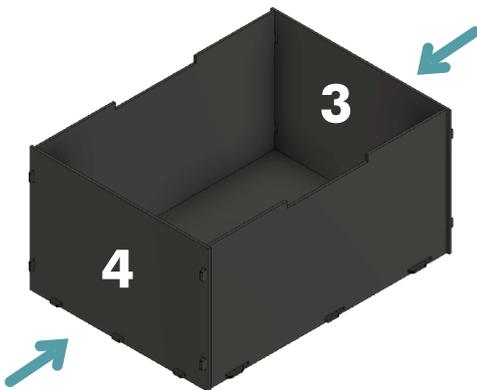

1. Firmly press the front and backpanels into place as per the illustration
2. Ensure that the panels "click" into place.

STEP ④



1. Place the contrasting red paper sheet and frosted red cover at the bottom of the box.
(Frosted sheet on top of red paper)

STEP ⑤



1. Secure the barrel plug connector with provided washer and nut.

YOU ARE DONE!

...and ready to start using your **LEAFLAB**.



www.dropsight.ag



dropsight
spray deposition tracer