


PROFESSIONAL WIRELESS INTERNET WEATHER STATION

Operation Manual


OVERVIEW

Outdoor sensor:

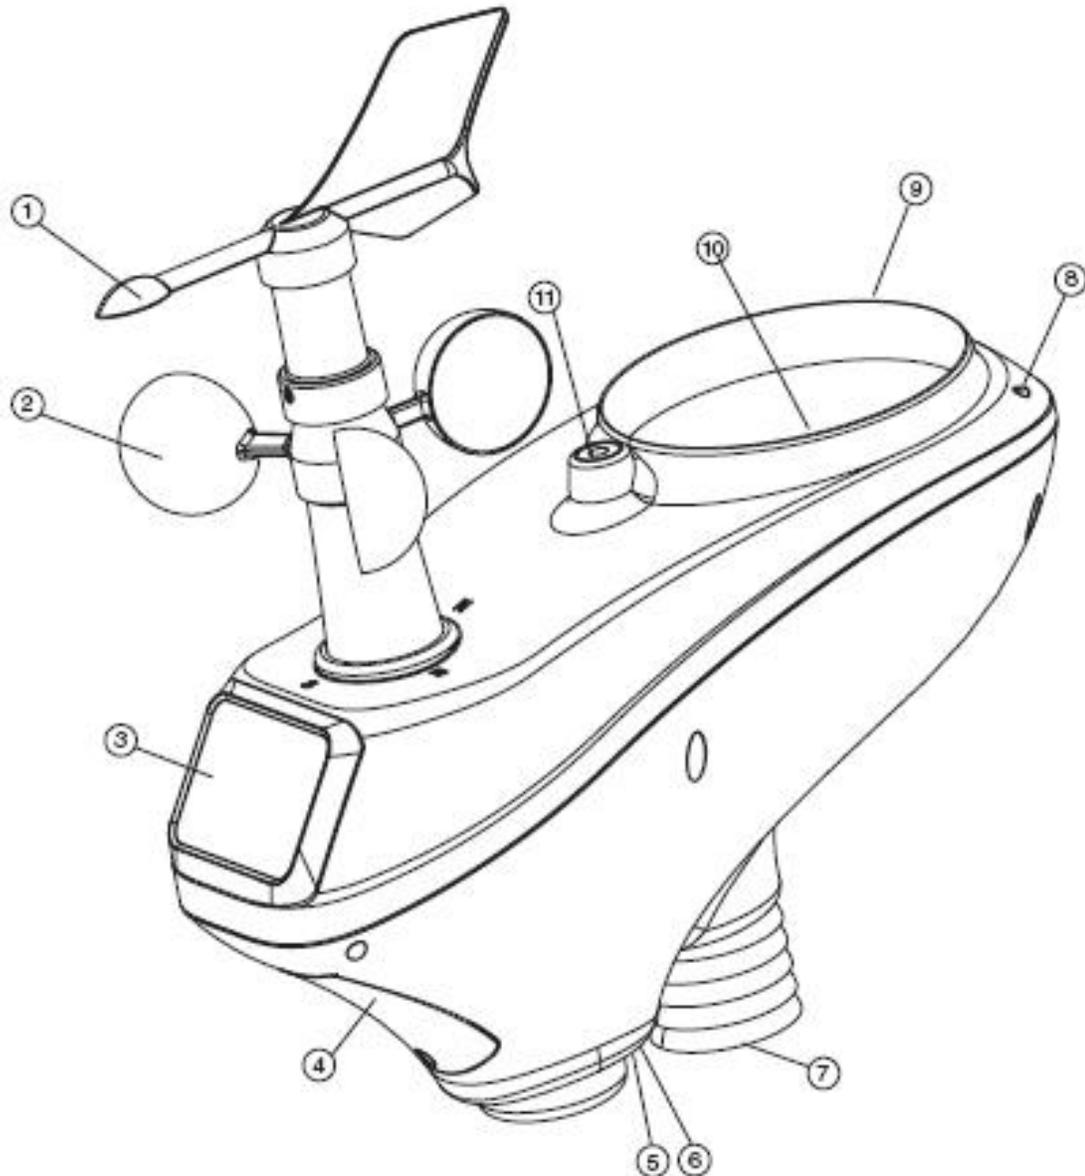


1. Wind Vane
2. Wind Speed Sensor
3. Solar panel
4. Battery compartment
5. LED Indicator: light on for 4s if the unit power up. Then the LED will flash once every 16 seconds (the sensor transmission update period).
6. Reset button
7. Thermo-hygro sensor
8. UV sensor
9. Light sensor
10. Rain collector
11. Bubble level

Indoor sensor

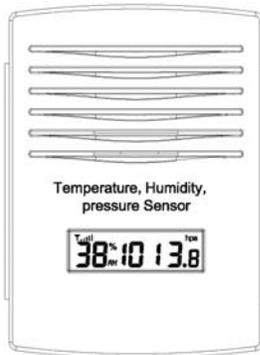

Display unit

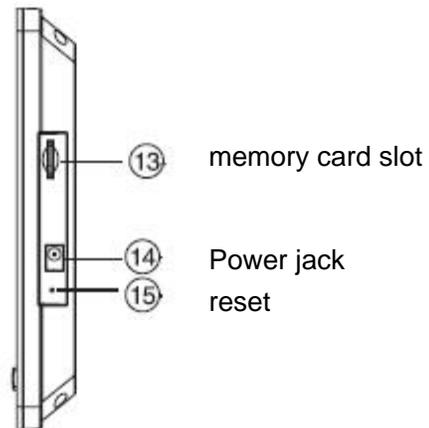

Contents

The weather station consists of the following parts.

QTY	Item
1	Display Console
1	Outdoor sensor(Thermo-hygrometer / Rain Gauge / Wind Speed Sensor /Transmitter)
1	Wind Vane
1	Indoor sensor
1	5V DC adaptor
1	Stainless Steel Tube (D32*H200mm)
2	U style Stainless Steel Loop
3	AA 1.5V rechargeable batteries for outdoor sensor
1	Zip bag for 1pc Allen wrench
1	User manual

Introduction

Thank you for your purchase this professional weather station. The outdoor sensor is solar powered and sends data to the console via a low-power radio. It allows you to upload your weather data to weather website: www.wunderground.com which you can share it with your friend.

This manual will guide you step-by-step through setting up your device. Use this manual to become familiar with your professional weather station, and save it for future reference.

Installation

Before placing and installing all components of the weather station at there final destination, please set up the weather station with all parts being nearby for testing the correct function.

Outdoor sensor

1. Attach the wind vane

Push the wind vane into the shaft. as shown in figure 1.

Tighten the set screw with the Allen Wrench (included) as shown in figure 2. Make sure the wind vane spin freely.

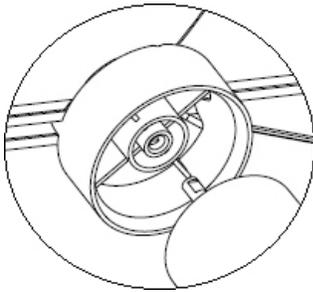


Figure 1

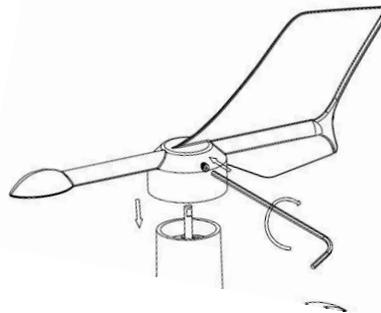


Figure 2

2. Insert the pole into the base, as shown in figure 3. Spin the lid onto the base as shown in figure 4.

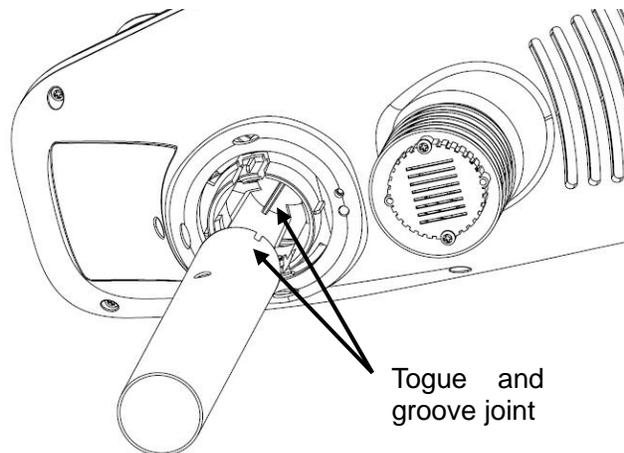


Figure 3

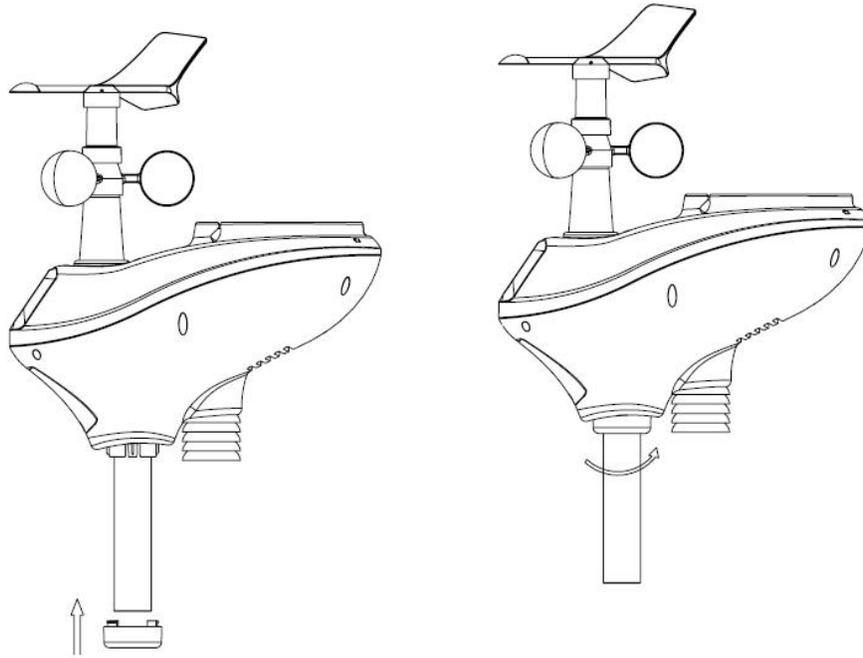


Figure 4

3. Locate the battery door on the thermo-hygrometer / rain gauge transmitter, as shown in Figure 5. Turn the set screw counter clockwise to loosen the screw to open the battery compartment. Insert 3XAA rechargeable batteries in the battery compartment. The LED indicator on the back of the transmitter will turn on for four seconds and normally flash once every 16 seconds (the sensor transmission update period).

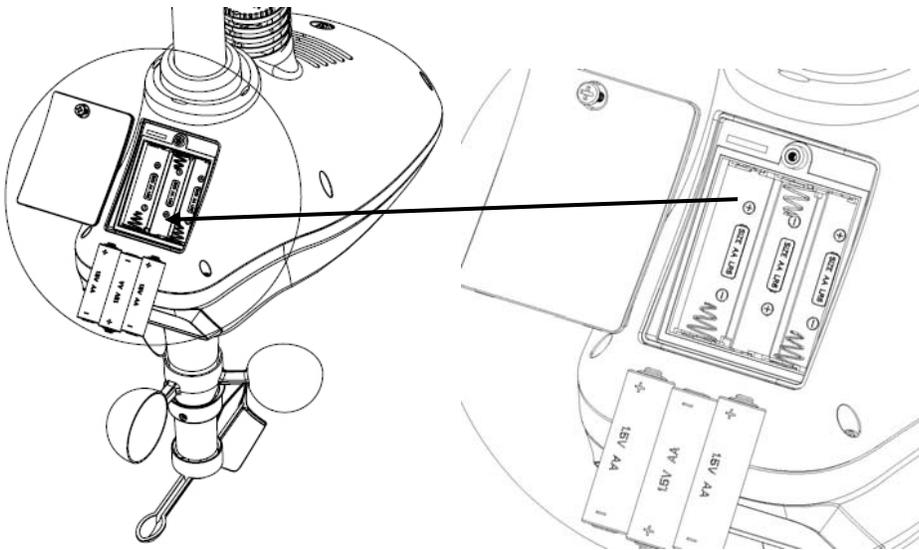


Figure 5

Note: If no LED light up or is lighted permanently, make sure the battery is inserted the correct way or a proper reset is happened. Do not install the batteries backwards. You can permanently damage the thermo-hygrometer.

4. Fasten the mounting pole to your mounting pole or bracket (purchased separately) with the two U-bolts, mounting pole brackets and nuts, as shown in Figure 6.

Tighten the mounting pole to your mounting pole with the U-Bolt assembly, as shown in Figure 7..

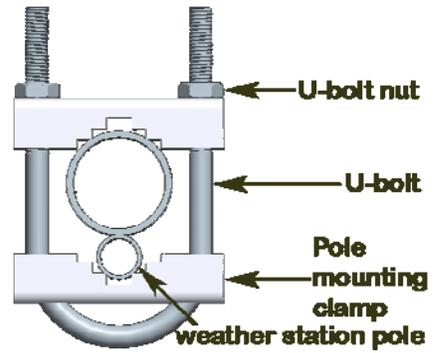


Figure 6

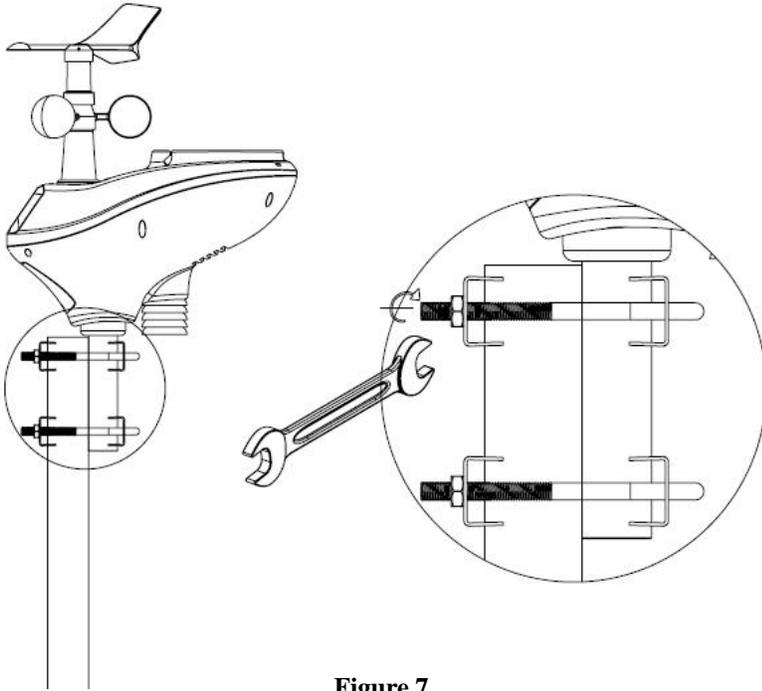


Figure 7

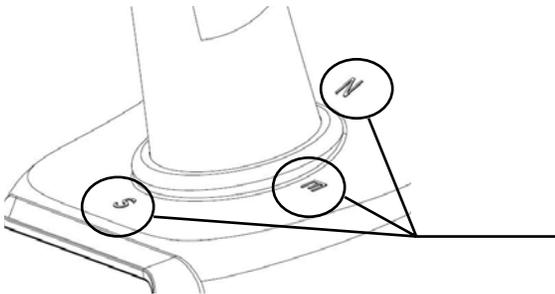


Figure 8

there are four alphabet letter of “N,”“E,”“S”and “W” representing for the direction of North, East, South and West, as Figure 8. Wind direction sensor has to be adjusted so that the directions on the sensor are matching with your real location. Permanent wind direction error will be introduced when the wind direction sensor is not positioned correctly during installation.

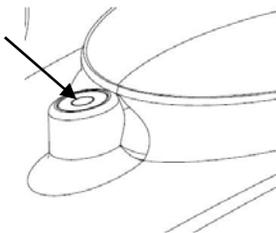


Figure 9

Level the sensors

Use the bubble level on the rain sensor as a guide to verify that sensors are level.

indoor sensor

Remove the battery door on the back of the sensor with a Philips screwdriver (there is only one screw, at the bottom of the unit). Insert two AAA batteries as shown in Figure 10 (we recommend lithium batteries for cold weather climates, but alkaline batteries are sufficient for most climates).

Replace the battery door and set screw. Note that the temperature, humidity and pressure will be displayed on the LCD display. Looking at the back of the unit from left to right, the polarity is (-) (+) for the top battery and (+) (-) for the bottom battery.

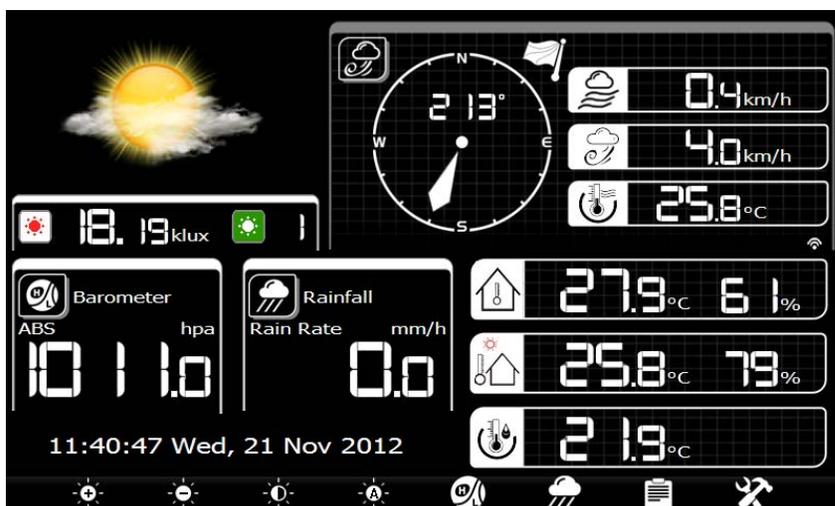


Figure 10

Initial Display Console Set Up

Connect the power adapter to power up the display console.


The display console starts to register the transmitter and receiver the weather data from transmitter. The interface as below:



Then it start to scan the Wi-Fi network, if it didn't found the available Wi-Fi it will shows" not find any AP (Access Point)". Press  key to return to normal display mode. Only after connect to WLAN you can upload the data to weather website. If the data upload to server successfully, the icon  will show on beneath the wind chill.


Program Mode

1. Normal display Mode

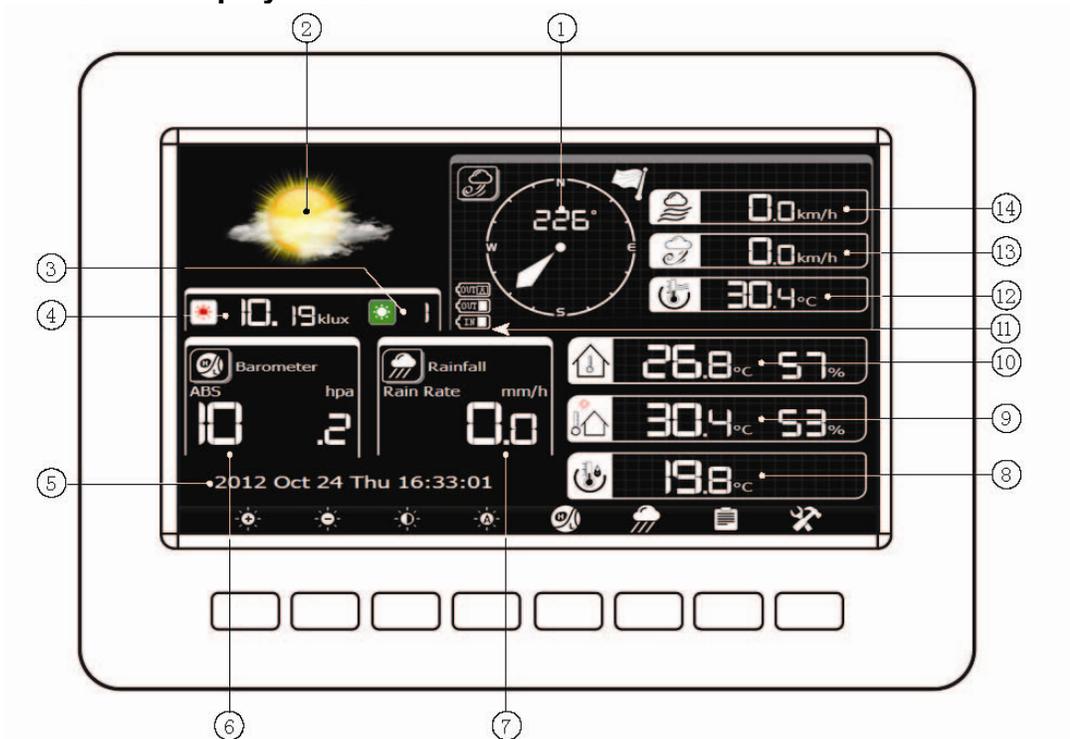

- | | |
|------------------------|-----------------------------------|
| 1. Wind direction | 8. Dew point |
| 2. Weather Forecast | 9. Outdoor Temperature & Humidity |
| 3. UV index | 10. Indoor Temperature & Humidity |
| 4. Light | 11. Low battery indicator |
| 5. Time and date | 12. Wind chill |
| 6. Barometric Pressure | 13. Gust |
| 7. Rainfall | 14. Wind speed |

Each icon in the display matches a black keys on plastic case. Please press the keys for operation.

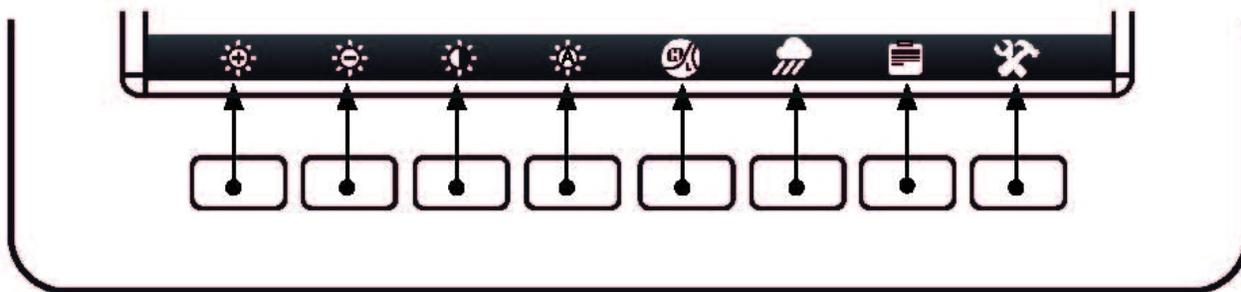


Icon	Description
	Brightness control key Press this key to enhance the brightness

	Brightness control key Press this key to decrease the brightness
	Backlight on/off key Press this key to on/off the backlight
	Auto backlight control key Press this key to enter the auto backlight setup mode
	Pressure display key Press this key to choose the display between Absolute pressure and Relative pressure.
	Rain key Press this key to Shift the display between Rain Rate, Rain Day, Rain Week, Rain Month, and Rain Year.
	History key Press this key to enter History Mode
	Setting key Press this key to enter Setting Mode

2. Auto backlight setup mode

While in normal display, press the  key to enter Auto backlight setup Mode.

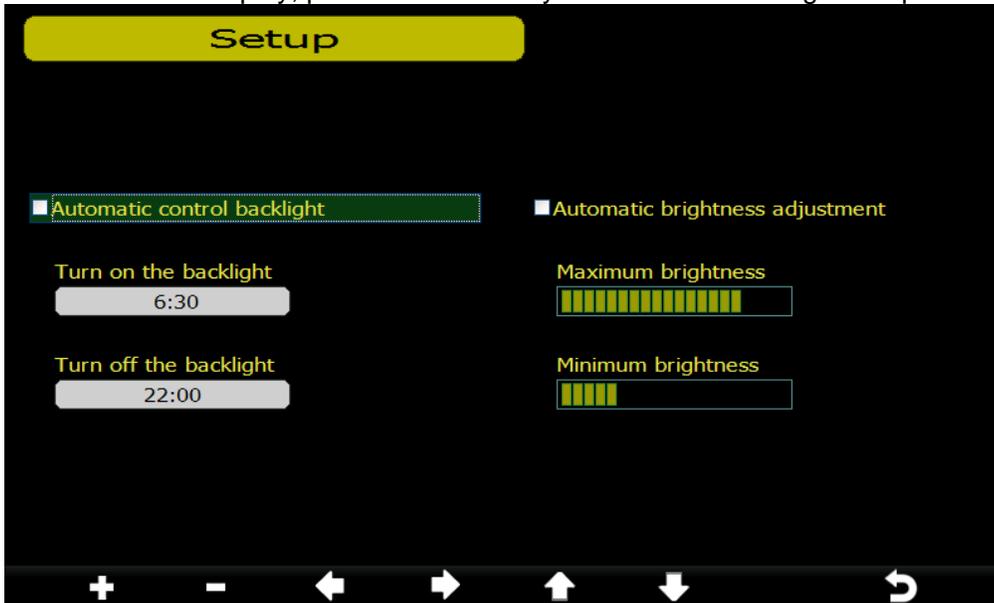

Automatic control backlight: select this option, the backlight will auto turn on and off according the set time

Turn on the backlight: set the time of turn on backlight

Turn off the backlith: set the time of turn off backlight

Automatic brightness adjustment: select this option, the brightness will change according to the light intensity measured from outdoor sensor

Maximum brightness: set the maximum brightness while it is the highest light intensity

Minimum brightness: set the minimum brightness while it is the weakest light intensity

Icon	Description
	Select key Press this key to select the unit or scrolls the value
	Select key Press this key to select the unit or scrolls the value.

	Left key Press this key to select the set value.
	Right key Press this key to select the set value.
	Up arrow key Press this key to change the activated option field
	Down arrow key Press this key to change the activated option field
	Return key Press this key to return to previous mode

If the auto backlight turn-on time has been set, you can press  key to turn off the backlight within the turn on time. Backlight will turn on again automatically at next turn on time. You can press any key to turn on the backlight for 60s within the turn off time


3. History Mode

While in normal display, press the  key to enter History Mode. You can select the below sub-mode by pressing the  key.

3.1 MAX/MIN Mode



Icon	Description
	Selection key Press this key to select the weather MAX/MIN record which need to clear
	Selection key Press this key to select the weather MAX/MIN record which need to clear
	Enter key While select the weather MAX/MIN record, press this key to popup Message Box"Are you sure to clear the Max/Min?"Press  key or  key to select YES or NO. Press the  key or  key to confirm the selection.
	Up arrow key Press this key to change the activated option field

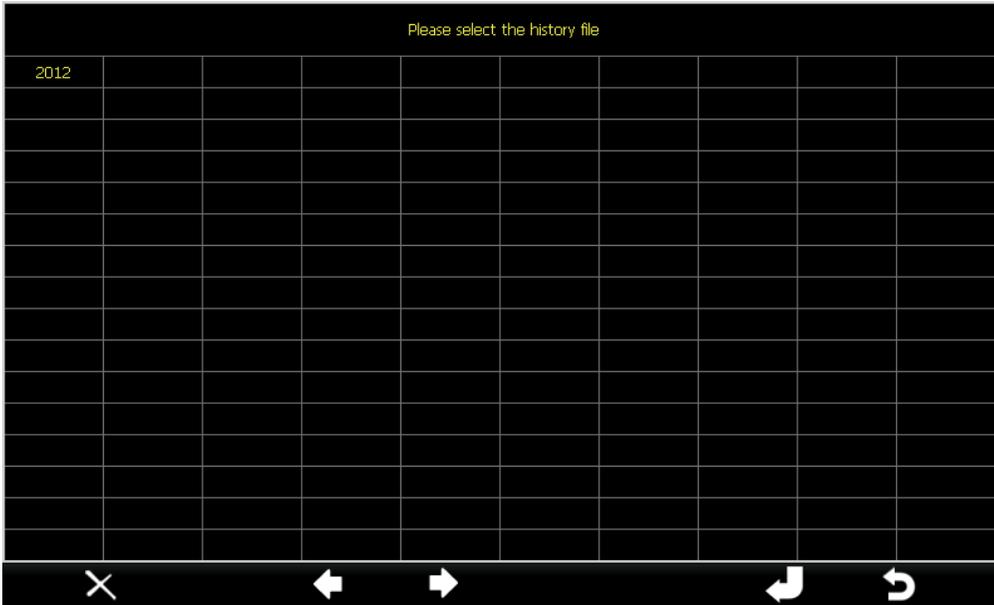


Press or key to select the history file of annual data. Press key to delete the selected file. Press key to exit and open the selected file. Press key to return to History record Mode.

While in History Record Mode, press the key to enter the page selection mode:

No.	Time	Indoor Temperature (°F)	Indoor Humidity (%)	Outdoor Temperature (°F)	Outdoor Humidity (%)	Wind (mph)	Gust (mph)	Dew Point (°F)	Wind Chill (°F)	Wind Dire (°)
625	PM6:54 7/3/2012	79.2	78	79.9	74	0.0	0.0	70.9	79.9	352
626	PM6:55 7/3/2012	79.2	78	79.9	74	0.0	0.0	70.9	79.9	352
627	PM6:56 7/3/2012	79.2	78	79.9	74	0.0	0.0	70.9	79.9	352
628	PM6:57 7/3/2012	79.2	78	79.9	73	0.0	0.0	70.5	79.9	352
629	PM6:58 7/3/2012	79.2	77	80.1	73	0.0	0.0	70.7	80.1	352
630	PM6:59 7/3/2012	79.3	77	80.1	73	0.0	0.0	70.7	80.1	352
631	PM7:00 7/3/2012	79.3	77	80.1	73	0.0	0.0	70.3	80.1	352
632	PM7:01 7/3/2012	79.5	77	80.1	73	0.0	0.0	70.5	80.2	352
633	PM7:02 7/3/2012	79.5	77	80.1	73	0.0	0.0	70.5	80.2	352
634	PM7:03 7/3/2012	79.5	77	80.1	73	0.0	0.0	70.5	80.2	352
635	PM7:04 7/3/2012	79.7	76	80.4	72	0.0	0.0	70.7	80.4	352
636	PM7:05 7/3/2012	79.7	75	80.4	72	0.0	0.0	70.7	80.4	352
637	PM7:06 7/3/2012	79.7	75	80.4	71	0.0	0.0	70.2	80.4	352
638	PM7:07 7/3/2012	79.7	75	80.4	71	0.0	0.0	70.2	80.4	352
639	PM7:08 7/3/2012	79.9	75	78.8	71	0.0	0.0	68.7	78.8	352
640	PM7:09 7/3/2012	79.9	75	80.6	70	0.0	0.0	70.0	80.6	352

Press or to select a digit in a number, press key or key to change the number. Press or to change the activated option field and press key or key to confirm.

3.3 History graph mode

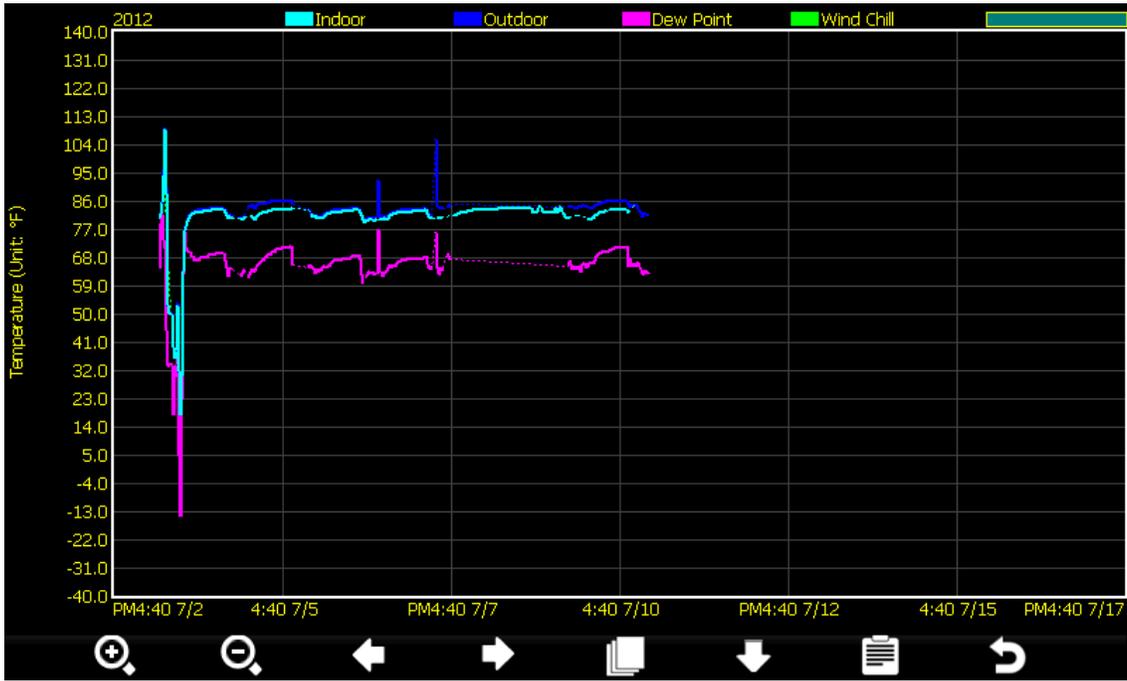


Icon	Description
	Zoom In key
	Zoom Out key
	Scroll left key Press this key to view the left of the scrollable area.
	Scroll right key Press this key to view the right of the scrollable area.
	Select file key Press this key to enter the file selection mode
	Page down key Press this key to scroll down the page you are viewing
	History key Press this key to select the sub-Mode
	Return key Press this key to return to previous mode

4. Setting Mode

While in normal display, press the  key to enter Setting Mode. You can select the below sub-mode by pressing the  key


4.1 Menu Setting Mode

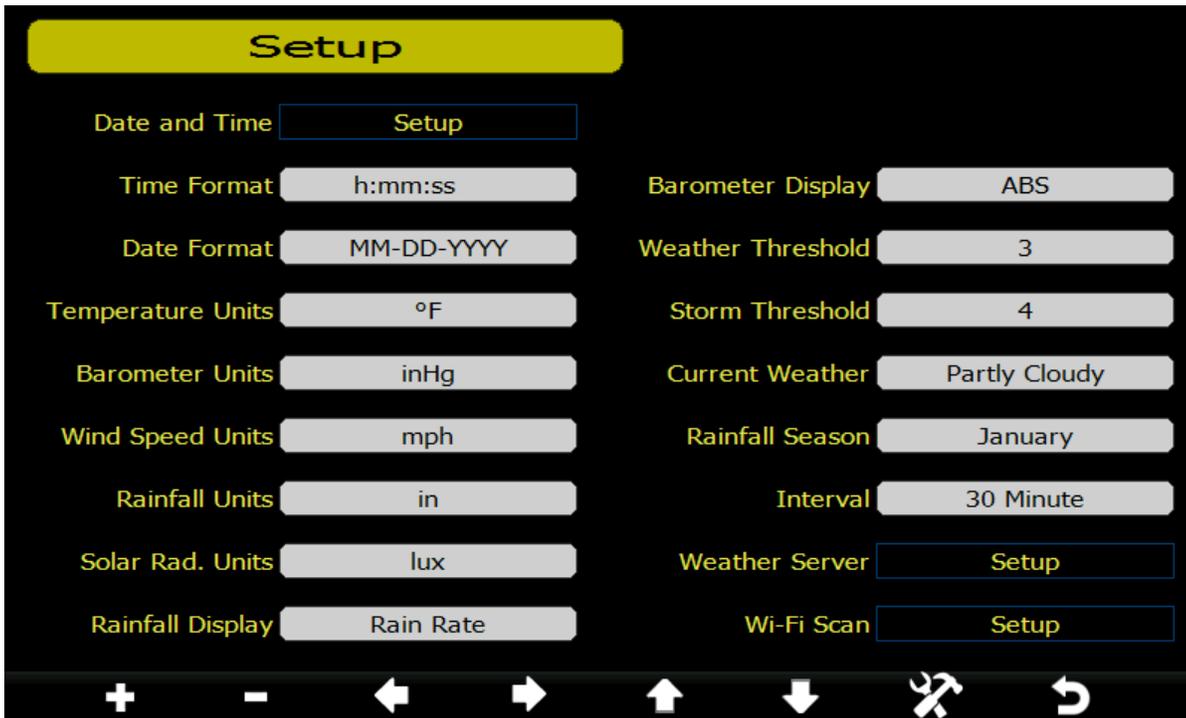

Icon	Description
	Select key Press this key to select the unit or scrolls the value
	Select key Press this key to select the unit or scrolls the value.
	Left key Press this key to select the set value.
	Right key Press this key to select the set value.
	Up arrow key Press this key to change the activated option field
	Down arrow key Press this key to change the activated option field
	Set key Press this key to select the Setting sub-Mode
	Return key Press this key to return to previous mode

4.1.1. Date and Time setting

While in Menu Setting Mode, press  key to select Date and Time Setup field, press  or  key to enter Date and Time Setup mode:

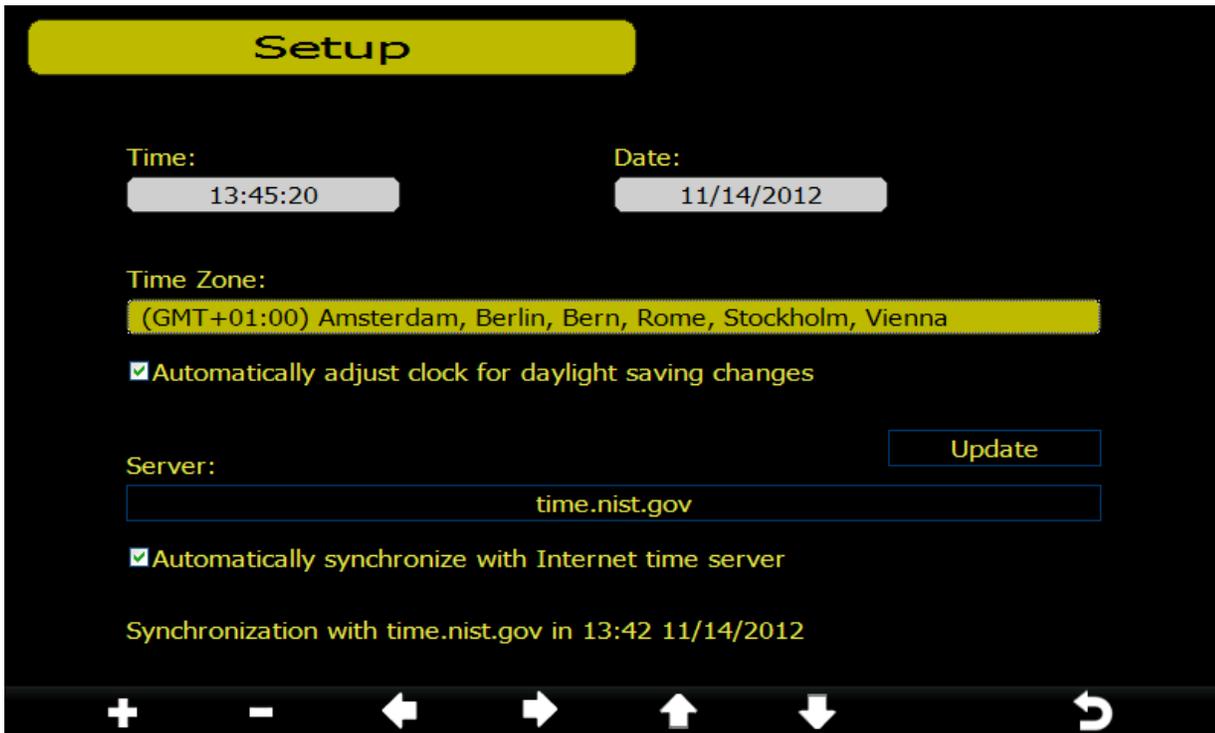

- 1) Time setting (hour/minute/second)
 Press key to select time setting field, the hour digit turn red, press the or key to change the hour setting. Press to set the minute, the minute digit turn red, press the or key to change the minute setting. Press to set the second, the second digit turn red, press the or key to change the second setting
- 2) Date setting
 Press key to select Date setting field, the day digit turn red, press the or key to change the day setting. Press to set the month, the month digit turn red, press the or key to change the month setting. Press to set the year, the year digit turn red, press the or key to change the year setting
- 3) Time zone setting
 Press key to select Time zone setting field, press the or key to change the time zone setting. Press key to select Update field, press the or key to update the time immediately.
- 4) DST setting
 If the state that were in the Time Zone observe DST, the option of “automatically adjust clock for Daylight Saving Change” will show on beneath the Time Zone setting. Press the or key to select this option..
- 5) Internet time server
 The default server is time.nist.gov. Press to popup the keyboard for you to type in the new server
- 6) Automatically synchronize with an internet time server
 Press the or key to select

- 4.1.2 Time Format setting (H:mm:ss / h:mm:ss AM / AM h:mm:ss, default H:mm:ss)
- 4.1.3 Date Format setting (MM-DD-YY, DD-MM -YY or YY- MM-DD format, default DD-MM-YYYY)
- 4.1.4 Temperature unit setting (°C / °F, default °C)

- 4.1.5 Barometric unit (hPa / inHg / mmhg, default hPa)
- 4.1.6 Wind speed unit (km/h, m/s, bft, mph, knots default: m/s)
- 4.1.7 Rainfall unit (mm, inch, default: mm)
- 4.1.8 Solar Rad. unit (lux,fc,w/m²)
- 4.1.9 Rainfall display (Rain Rate, Rain Day, Rain Week, Rain Month, Rain Year)

Rain Rate: it forecast the rain per hour base on the recently 10 minute's rainfall. For example: the rainfall of recent 10 minutes is 12mm, the rain/hour is 12mm*6=72mm/h.

Note: The rain per day is reset to zero at 0:00hr every day. The rain per week is reset to zero at 0:00hr every Sunday, per month is reset to zero at 0:00hr every first day of the month. The reset of the rain per year refer to rainfall season section

- 4.1.10 Barometric display (Absolutely, Relative)

- 4.1.11 Weather threshold (2-4, default 3)

It's pressure sensitivity setting for weather forecasting. When the pressure rises over weather threshold in past 12 hours the weather upgrades (like from partly cloudy to sunny). When the pressure drops over weather threshold in past 12 hours the weather degrades (like from cloudy to raining). For areas that experience frequent changes in air pressure requires a higher level setting compared to an area where the air pressure is stagnant. For example if 4 is selected, then there must be a fall or rise in air pressure of at least 4hPa needed to change the weather forecast icons.

- 4.1.12 Storm threshold (3-9, default 4)

Similar to the general pressure sensitivity setting it is possible to adjust the storm threshold sensitivity form 3-9 (default 4). When there is a fall over storm threshold within 3 hours, the storm icon will appear.

- 4.1.13 Current weather

The five weather icons are Sunny, Partly Cloudy, Cloudy, Rainy and Storm.



Sunny



Partly Cloudy



Cloudy



Rainy



Storm


- 4.1.14 Rainfall season (default: January)

Rainfall season influence the annual rainfall maximum, minimum and total value. When one month was selected, the annual rainfall and annual max/min rainfall were zero clearing at 0:00 of the first day of the selected month,

- 4.1.15 Storing Interval (1-240minutes)

- 4.1.16 Weather Server


Press **+** or **-** key to enter Weather Server set up mode, type in the Station ID and password to upload the data.

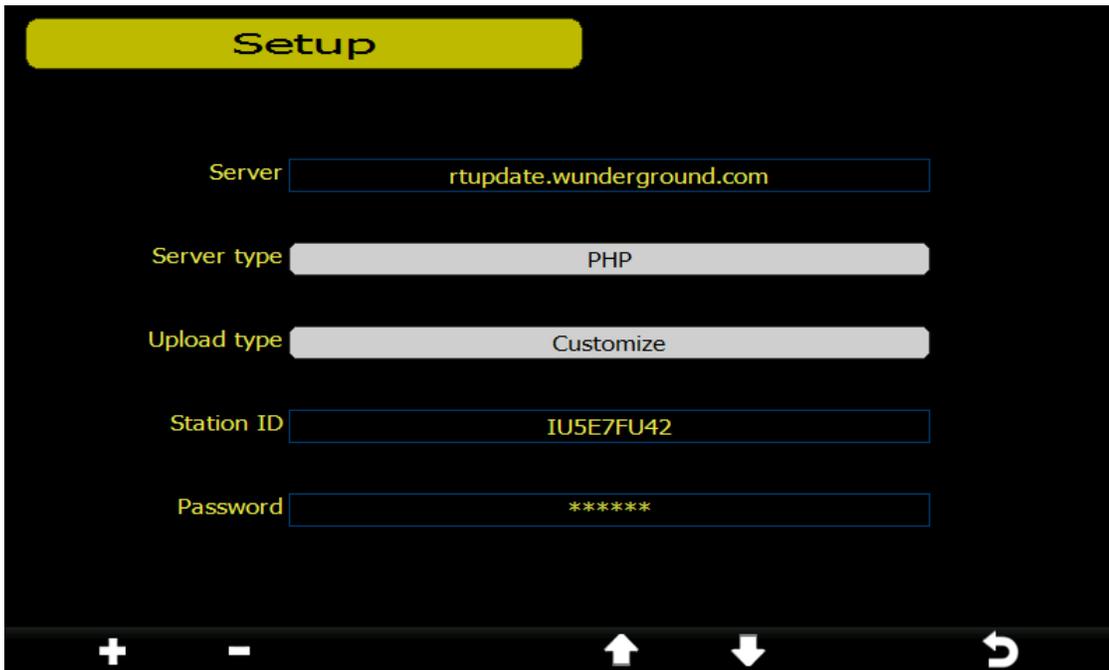

1. **Set Station ID.** Press to highlight the Station ID. Enter your station ID obtained from Wunderground.com. Press to display the keyboard. Press to scroll to the character and press to select the character. Press to return to the Wunderground.com setup page.
2. **Set Password.** Press to highlight the Password. Enter your password obtained from Wunderground.com. Press to display the keyboard. Press to scroll to the character and press to select the character. Press to return to the Wunderground.com setup page.

Note: How to create a Wunderground.com account and station ID.

1. Join the Wunderground.com Community. Visit:
<https://www.wunderground.com/members/signup.asp>
 and sign up with Wunderground.com.

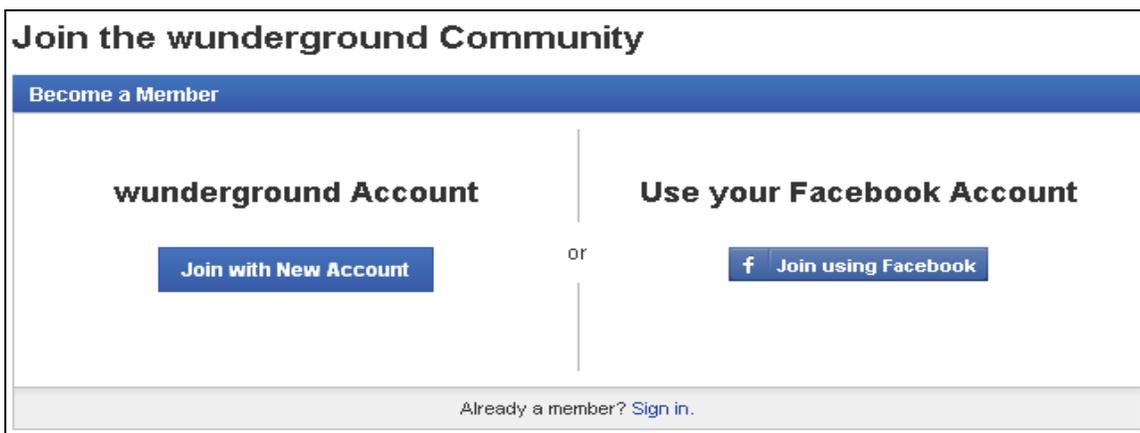

2. Join the Personal Weather Station (PWS) network. Visit:

<http://www.wunderground.com/weatherstation/about.asp>

and **Get Started!** to add your weather station and you will receive a Station ID.

Get your own FRONT-DOOR FORECAST! **Get Started!**

JOIN OUR **PWS NETWORK!** (Personal Weather Station)

WHAT IS A PWS?

A personal weather station (PWS) is an outdoor instrument that measures weather conditions.

Basic stations may include a thermometer, barometer, anemometer, hygrometer, and wind vanes. More sophisticated stations may also measure UV index, leaf wetness, soil moisture and temperature, and water temperature.

[Learn More](#)

THE BENEFITS OF JOINING OUR NETWORK

By purchasing your own station and joining our PWS community, you can:

- Get personalized forecasts based on your own weather data
- Access archived data with charts & graphs
- Easily share your weather data

Your PWS data will go into our proprietary forecasting model, making forecasts more local and more accurate.

Our PWS network is the world's largest, with over 25,000 active stations and growing. Be a part of our community and join today!

[Learn More](#) **Get Started!**

Enter the Station ID obtained and password you entered in the console's Weather Server page.

Note: If Wunderground.com is not updating, make sure the Station ID and Password are correct. The Station ID is all capital letters, and the password is case sensitive. The most common issue is substituting an O for 0 in the Station ID.

4.1.17 Wi-Fi scan

Select Wi-Fi Network

Network Name	Encryption	Status	Signal Strength
foshk_asus	Encrypt	Connected	Full
foshk_fhl	Encrypt	Not Connected	Medium
foshk_pi	Encrypt	Not Connected	Medium
ChinaNet-RdH5	Encrypt	Not Connected	Medium
motouch	Encrypt	Not Connected	Medium

5 AP at list.

Press or key to select the Wi-Fi network. Press key to confirm and enter the password. Press key to return to normal display mode. Only after connect to WLAN you can upload the data to weather website. If the data upload to server successfully, the icon will show on beneath the wind chill.

4.2 Alarm Setting Mode




Icon	Description
	Select key Press this key to select the unit or scrolls the value
	Select key Press this key to select the unit or scrolls the value.
	Left key Press this key to select the set value.
	Right key Press this key to select the set value.
	Up arrow key Press this key to change the activated option field
	Down arrow key Press this key to change the activated option field
	Set key Press this key to select the Setting sub-Mode
	Return key Press this key to return to previous mode

The first row is high alarm value and the second row is low alarm value.

When a set weather alarm condition has been triggered, that particular alarm will sound for 120 second and the corresponding icon will flash until the weather condition doesn't meet the user set level. Press any key to mute the alarm.

4.3 Calibration Mode

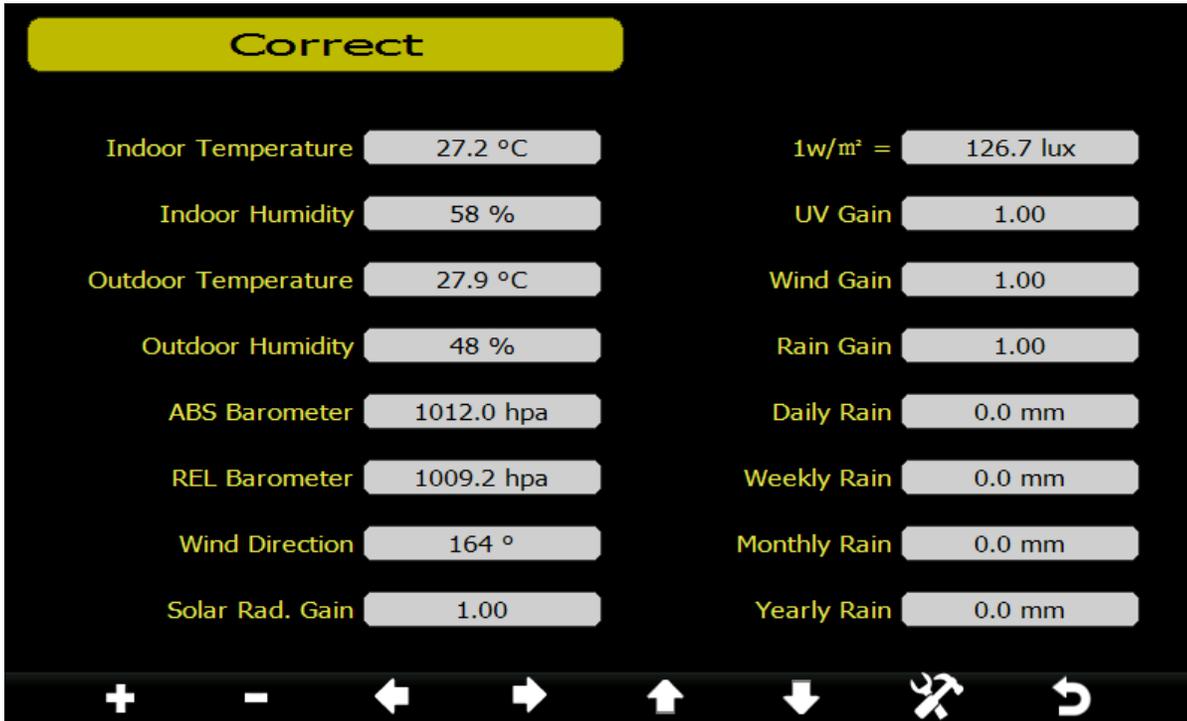

Icon	Description
	Select key Press this key to select the unit or scrolls the value
	Select key Press this key to select the unit or scrolls the value.
	Left key Press this key to select the set value.
	Right key Press this key to select the set value.
	Up arrow key Press this key to change the activated option field
	Down arrow key Press this key to change the activated option field
	Set key Press this key to select the Setting sub-Mode
	Return key Press this key to return to previous mode

Solar Rad. Gain calibration (default is 1.0, adjustment range 0.75 to 1.25)

UV calibration (default is 1.0, adjustment range 0.75 to 1.25)

Wind Calibration (default is 1.0, adjustment range 0.75 to 1.25)

Rain calibration (default is 1.0, adjustment range 0.75 to 1.25)

The conversion factor for Lux converter to w/m^2 . (The range is 100-1000, default 126.7.)

NOTE: UV Calibration MUST be performed every 2 to 3 months to improve results. Over time, UV Index may alter results based on bright and strong sunlight conditions. This is why diligent UV Calibration is recommended.

4.4 Factory reset



4.4.2 Re-register indoor transmitter

Press or key to select re-register indoor transmitter. Press or key to popup the Message Box "Are you sure you want to register the new indoor transmitter?" Press or to select Yes or No. Press the key or key to confirm the selection.

4.4.3 Re-register outdoor transmitter

Please reference section 4.4.1. Procedures and settings are similar to re-register indoor transmitter

4.4.4 Clear History

Please reference section 4.4.1.

4.4.5 Clear Max/Min

Please reference section 4.4.1.

4.4.6 Reset Factory

Please reference section 4.4.1

4.4.7 Backup data

Press or key to select Backup data field, press the or key to enter backup mode:



Press or key to select the history year file. Press key or key to confirm the selection. Press or to change the activated option field. Press key to start backup, press key again to stop the backup. Please insert TF card before start backup. The data save as excel format as default setting.



- 4.4.8 Language (English, Chinese, Danish, Dutch, French, German, Italian, Spanish)
- 4.4.9 About information

About

Model: HP1000
Total storage: 39 MB
Available storage: 38 MB
OS version: 1.0.0
Firmware revision number: 1.0.0
Frequency: 868M
Indoor ID: --
Outdoor ID: --



Specifications

Outdoor data

Transmission distance in open field :	100m(330 feet)
Frequency :	433 MHz / 868 MHz / 915 MHz (option)
Temperature range :	-30°C--65° C (-22°F to +149°F)
Accuracy :	+ / - 1 °C
Resolution :	0.1°C
Measuring range rel. humidity :	1%~99%
Accuracy :	+/- 5%
Rain volume display :	0 – 9999mm (show --- if outside range)
Accuracy :	+ / - 10%
Resolution :	0.3mm (if rain volume < 1000mm) 1mm (if rain volume > 1000mm)
Wind speed :	0-50m/s (0~100mph) (show --- if outside range)
Accuracy:	+/- 1m/s (wind speed< 5m/s) +/-10% (wind speed > 5m/s)
Light :	0-400k Lux
Accuracy :	+/-15%
Measuring interval outdoor sensor:	16 sec
Measuring interval indoor sensor :	64 sec
Indoor data	
Indoor temperature range :	-40°C--60°C (-40°F to + 140°F) (show --- if outside range)
Resolution :	0.1°C
Measuring range rel. humidity :	1%~99%
Resolution :	1%

Measuring range air pressure : 300-1100hPa (8.85-32.5inHg)
Accuracy : +/-3hpa under 700-1100hPa
Resolution : 0.1hPa (0.01inHg)
Alarm duration : 120 sec

Power consumption

Base station : 5V DC adaptor (included)
Indoor sensor : 2xAAA alkaline batteries (not included)
Remote sensor : 3xAA alkaline rechargeable batteries (included)

Remark: Be sure to use 1.5V rechargeable battery for solar transmitter.

Where outdoor temperature is lower than -20°C, make sure proper type of batteries to be used to assure that the device can get enough power to maintain its function properly. Normal alkaline batteries is not allow to be used since when outdoor temperature is lower than -20 °C, the battery's discharging capability is greatly reduced.



Please help in the preservation of the environment and return used batteries to an authorized depot.

All rights reserved. This handbook must not be reproduced in any form, even in excerpts, or duplicated or processed using electronic, mechanical or chemical procedures without written permission of the publisher.

This handbook may contain mistakes and printing errors. The information in this handbook is regularly checked and corrections made in the next issue. We accept no liability for technical mistakes or printing errors, or their consequences. All trademarks and patents are acknowledged.